

V15(EN)  
User Manual

Voice Recorder

A letter to our customers

Dear Friend,

Thank you for purchasing this product!

In order to use the product correctly, please read this manual carefully before use.

Before recording for the first time, please take 2.5 hours to fully charge it first. Then set the correct date and time on your computer, as the recording file will be named with the date and time.

One button starts recording (ON) and saves the recording (OFF), and then connect the data cable and headphones to listen to the recording. Or, you can connect your computer to play these files.

We listen carefully to every customer's opinion. If you have any questions with the product, please contact us. [Order History] - [Seller] - [Ask a Question]. For more details, please refer to Catalog 7 [Warranty & Service].

Thank you for your nice support. Have a nice day :)

Voice Recorder

 
Catalog

1. Product Introduction .....	1
1.1 Voice recorder .....	1
1.2 Wire control .....	2
1.3 Indicator light .....	3
2. Quick Help .....	4
2.1 Charge first .....	4
2.2 Set the date&time on computer .....	6
2.3 Record/Save .....	9
2.4 Listen by earphones(No speakers) .....	10
2.5 Playback on computer .....	11
2.6 Playback on Android phone(OTG) .....	14
2.7 Failed to connect to computer/phone? .....	15
3. Recording Settings [RECSET.txt] .....	17
3.1 Notes before setting .....	17
3.2 Explanation .....	20
4. Product Description .....	23
5. QA .....	24
6. Package Contents .....	28
7. Warranty & Service .....	28
8. PDF User Manual .....	29
Cautions .....	30

Voice Recorder

1. Product Introduction


1.1 Voice recorder

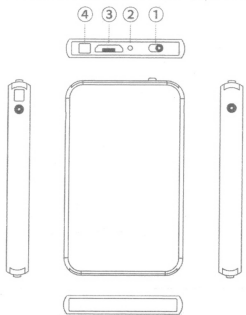

- ①Power/Recording button: Turn on and start recording, turn off and save the recording
- ②Indicator/Sound source input hole
- ③Micro-USB port
- ④Lanyard hole

Voice Recorder

 1.2 Wire control



- ①Connect with recorder
- ②Volume +
- ③Volume -
- ④Play/Pause
- ⑤Previous track (short press)  
Fast rewind (long press)
- ⑥Next track (short press)  
Fast forward (long press)
- ⑦3.5 mm earphones jack


Note.

- ①Fast forward/rewind only in the playing mode.
- ②The recorder will automatically shut down when it is not playing for a long time.

Voice Recorder

For Windows:

- ①Turn off the recorder first, and then connect it to the Windows computer.
- ②Click [USB DISK] → [Settime] → [SetDigitRecorderTm.exe], then click [SetTime] to synchronize the time automatically.

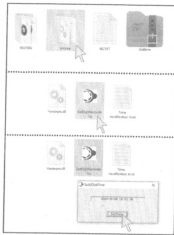

Note.

- ①It is recommended that Windows users use this method to set the time and use this tool to synchronize the time after each setup of the [RECSET] file.
- ②Running this program on Mac OS is not supported. So Mac users cannot use this method.

Voice Recorder


For Mac OS:

- ①Turn off recorder first, connect the recorder to the Mac and turn on [USB DISK].
- ②Copy the [RECSET] file to the Mac desktop and make changes on the Mac desktop.

Note.

Change the time setting numbers to the exact time in the order of year, month, hour, minute, and second.

Example:  
2022.11.29-14:23:00 → 20221129142300

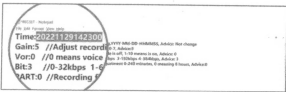

- ③Save the file after completing the changes.
- ④Move the original [RECSET] file from the [USB DISK] to the Trash. Copy the modified [RECSET] file to the [USB DISK].

Voice Recorder

2.3 Record/Save



- On/Record: Turn on and start recording.

**The purple light is on for 4-5 seconds, the red light flashes 3 times and then goes off, the recorder enters recording mode. No indicator light when recording.**

- Off/Save: Turn off and save the recording.


**The red light flashes once.**



- ①In the recording mode, inserting the headphones will automatically save the current recording and playback.
- ②In the recording mode, insert the data cable or other external devices will pause the recording (does not work).
- ③The recorder should be kept at least 30cm away from the sound source, otherwise it is likely to produce a burst of sound.

Voice Recorder

2.4 Listen by earphones(No speakers)

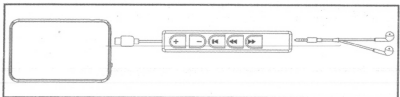

- In the off state, connect the recorder with the remote control device and headphones. Turn on the recorder and it will play automatically within a few seconds.


**The blue light flashes when playing. Red light flashes quickly when fast forward/rewind.**

Note.

- ①If there is no auto play, please press the [PLAY] button.
- ②Press the [PAUSE] button after connecting the headphones, it will turn off automatically if it does not play for a long time.

Voice Recorder

2.5 Playback on computer

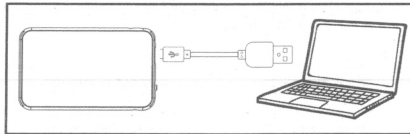

- ①Turn off the recorder.
- ①Connect to the computer using the included USB cable.
- ②Open [USB DISK] - [RECORD] and select the file you want to play.

For Windows:

The recording format is "WAV". If the player can't play the wav files, please use another player, such as [Windows Media Player].




[Groove Music] that comes with Win10 does not support playing WAV recordings.

Voice Recorder

1.3 Indicator light


Turn on	Purple light on for 4-5 seconds, red light flashes 3 times
During recording	No indicator flashes
Turn off	The purple indicator flashes once
Charging	When charging, the red indicator flashes, when full-charged, the blue light is always on
Record while charging	No indicator flashes
Low power	The red Indicator flashes quickly for about 10 seconds and then automatically shut down
Earphones playback	Blue indicator flashes
Fast forward / Fast rewind	When playing, long press ⏮/⏭ to fast rewind/ fast forward, the red indicator flashes rapidly

Voice Recorder

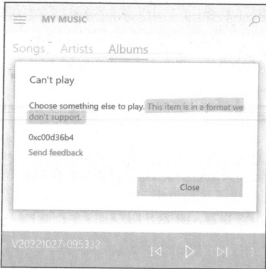

Please refer to the following two methods for playback:

- ①[USB DISK] - [RECORD] - [Open with]- [Windows Media Player /iTunes /QuickTimePlayer]

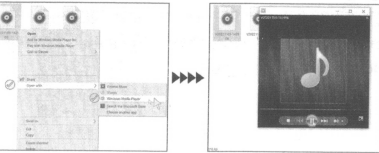


Voice Recorder

2. Quick Help

2.1 Charge first

Please charge before use. Charging time: 2.5h.

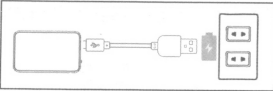

- ①Turn off the recorder first.
- ②Connect the unit to the USB charger (not included) with the included USB cable.

**Red light stays on when charging, and blue light stays on after full charge.**

Note.

Please use a professional usb wall charger to charge. Charging directly on the computer is not recommended as it can be slow.

Voice Recorder

Recording while charging

**If you turn on the record button while charging, the red light flashes three times and then turns off. No indicator light when recording while charging.**

- ①Turn off the recorder first.
- ②Open the recorder when charging, the recorder into the recording mode (recording is only possible when connected to a USB charger for charging, not when connected to a computer or other device for charging!)

●If the recorder is on (recording) before charging. Then the unit will pause recording (not working) when the data cable is inserted.




Connecting any device (computer, headphones, cell phone, usb charger, etc.) during recording will pause recording.

Voice Recorder

2.2 Set the date&time on computer

Recording files are named according to the date and time of the recording (timestamp function). So before recording, please connect to the computer to set the correct date&time. Example.

2022/09/25, 09:30:30>>R20220925-093030.WAV

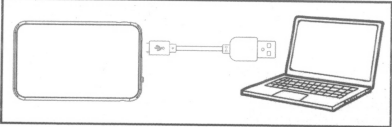

Note.

- ①Turn off the recorder before connecting to the computer. Do not press any buttons on the recorder when connecting, wait a few seconds.
- ②If you have accidentally deleted the [Settime] file, please contact us and we will send it to you.
- ③When changing the other parameters in [RECSET], the time will be changed as well. So it needs to be set again.

Voice Recorder

5. QA

Q1: Can't record/doesn't work?

- ①Check if the power and memory are sufficient.
- ②Recording is not possible when the recorder is connected to a computer, mobile phone or headphones.
- ③Is the recorder plugged into accessories such as data cable when recording, which will stop it from working. If you want to continue recording, please disconnect them from the recorder and turn it on again.
- ④Is the voice activation function turned on? If it is turned on, the recorder will stop working when the environment is quiet.
- ⑤If you still can't solve it, please contact us.

Q2: Can't listen after connecting earphones?


Headphones playback method: please refer to **Catalog 2.4**

- ①Make sure the earphones has been inserted, and the recorder is turned off before inserting the earphones.

Voice Recorder

②Modify the default player:

[Settings] - [Apps] - [Defaults apps] - [Music Player] - [Windows Media Player]. Once the setting is complete, open [USB DISK] - [RECORD], click on the recording to play it directly.

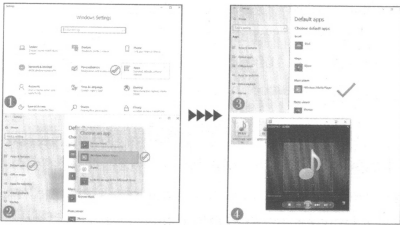

For Mac OS:

Open [USB DISK] - [RECORD]. Click the recording to play it directly.

Voice Recorder

2.6 Playback on Android phone(OTG)

Check if turn on the OTG function of your Android phone first, then connect the voice recorder in the off state with the OTG adapter, (Turn off the recorder without pressing any buttons)

Path: [File Management] → [USB Device] → [RECORD].



Since each Android device model is different, we can't guarantee that all devices can be connected via OTG!

Voice Recorder


2.7 Failed to connect to computer/phone?

- ①Please make sure the recorder is turned off. When connecting, please place the recorder smoothly and do not press any buttons(wait a few seconds).
- ②Please use the original USB cable that can be used to transfer data (some data cables can only be used for charging).
- ③Restart the computer/phone or recorder.
- ④ If the cable in the package does not connect successfully, please connect with a different cable to rule out cable problems(MAC user: please replace the USB-C adapter).
- ⑤Exclude USB interface does not have problems: can be tested by connecting other USB devices on this interface.
- ⑥ Exclude USB device itself does not have any problems (i.e. recorder): can be tested by connecting it on other computers to ensure that it works properly.

Specifically, for Windows

- ⑦Check if the usb disk identification appears on my computer. Click "USB Disk Identifier" at the bottom

Voice Recorder  
right corner of the desktop - [Open Devices and Printers] - [Devices] - right click [HS USB FlashDisk] - [Remove Device], and then reconnect to your computer.

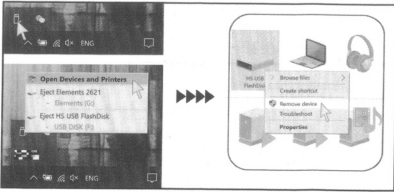

Specifically, for Android phone

③Make sure the OTG function is turned on.  
[Settings] - Search for "OTG or USB" and turn on the OTG function to allow other devices to connect. (Since each Android device model is different, you can Google search or ask the phone manufacturer for the exact method to turn on the OTG function).

Voice Recorder  
3. Recording Settings [RECSET.txt]

- 3.1 Notes before setting
- ①Be sure to turn off the recorder before connecting to the computer.
  - ②Do not press any buttons on the recorder when connecting, wait a few seconds and open [USB DISK]-[RECSET].
  - ③The factory settings are best by default, please modify them carefully. It is not recommended to change them except for the [Time].
  - ④Changing this file will reset the time, please set the time again!
  - ⑤ If there are any errors in the settings, please change all parameters to the default ones.
  - ⑥Please modify only the numeric part as shown in the figure below, or it may not work.

Time:20221129142300 //Time setting,YYYY-MM-DD HHMMSS, Advice: Not change  
Gain:5 //Adjust recording sensitivity 0-7, Advice:5  
Vor:0 //0 means voice activated mode is off, 1-10 means is on, Advice: 0  
Bit:3 //0-32kbps 1-64kbps 2-128kbps 3-192kbps 4-384kbps, Advice: 3  
PART:0 //Recording file division, Adjustment 0-240 minutes, 0 meaning 8 hours, Advice:0

Voice Recorder  
How to set on Windows/Mac PC?  
For Windows:  
Click [USB DISK]-[RECSET]. Set and save directly.  
Windows user scan the QR code to see a video demonstration.



Voice Recorder  
For Mac:  
①Copy the [RECSET] file to the Mac desktop and make changes on the Mac desktop.  
②Save the file after completing the changes.  
③Move the [RECSET] file from the original [USB DISK] to the Trash. Copy the modified [RECSET] file to the USB DISK.  
Mac user scan the QR code to see a video demonstration.



3.2 Explanation	
Time:	//Time Setting
Gain:5	//Adjust recording sensitivity 0-7, Advice:5
Vor:0	//0 means voice activated mode is off, 1-5 means is on, Advice: 0
Bit:3	//0-32kbps 1-64kbps... Advice: 3
PART:0	//Recording file division, Adjustment 0-240 minutes, 0 meaning 8 hours, Advice: 0

Time: Time setting  
It must be 14 digits! It is recommended that Windows users set the time via [Settime]. Please refer to [Catalog 2.2](#) for time setting.

Gain: Recording sensitivity (Advice:5)  
•The larger the number, the higher the sensitivity and the greater the background noise of the recording.  
•If set to 1, the sensitivity level is too low and some

Voice Recorder  
②Make sure there is a recording file in the recorder.  
③The sound may be too low, you can increase the volume appropriately  
④The file being played is not supported by the recorder(only supports MP3/WMA/WAV formats)

Q3: Voice activation function not working?  
①After setting the voice activation function, please disconnect the recorder from the computer and turn the recorder on. The recorder is recording in voice activated mode at this time.  
②When voice activation is turned on, the recorder will start recording when it recognizes the surrounding sound, which normally takes more than 40-50 decibels. If the ambient sound is too low, it will not activate the recorder to continue recording (not working)  
③The distance from the sound source will also affect its effect, if the distance is farther, the decibel value also needs to be bigger to work. If you still have questions, please contact us and we will help you.

Voice Recorder  
Q4: How can I check if the recorder is recording?  
The indicator light does not light up during the recording process. Please ensure that the record button is on at this time. Alternatively, simply restart the recorder.

Q5: If PC / Phone connection fails?  
Please refer to [Catalog 2.2](#) [Failed to connect to computer/phone?]

Q6: How to reduce noise?  
①Place the recorder stably and avoid rubbing it against other objects, such as hands, clothing, etc.  
②Away from sources of noise (e.g. air conditioning, typing, or subtle noise that may be generated by running computers)  
③The recorder should be at least 30cm away from the sound source, otherwise it is likely to produce a bursting sound  
④If the recording environment is very noisy, can not avoid the noise, please understand. Advice: Recording in quiet environment.

Voice Recorder  
Q7: Can't fast forward/rewind?  
Fast forward/rewind is only possible during playback.  
Q8: Why is the actual storage space of this recorder not up to the advertised storage space?  
All memory manufacturers produce memory according to 1000MB=1GB, while computers identify devices according to 1024MB=1GB.

Q9: I lost my earphones and remote control. Where can I get a new one?  
Don't worry about it, please contact us in time, we will solve your problem in the first time

Q10:What if this product does not meet my expectations?  
Dear customer, if this product does not meet your expectations or have any product problems, please send us an email to tell us, we will reply you as soon as possible within 24 hours to give you the most satisfactory solution.

Voice Recorder  
6. Package Contents  
• Digital Voice Recorder x 1  
• Data Cable x 1  
• Wire Control x 1  
• User Manual x 1

7. Warranty & Service  
This product is shipped after strict quality control and product inspection, in case of failure or you encounter any problem, please contact us at:  
Amazon:  
[Order History] - [Seller] - [Ask a Question]  
Or if you find a small card inside the box, you can contact us at the email address above(Not necessarily including). Our team would reply within 1 working day, and provide you a nice solution.  
Every product comes with 12 Month Guaranty, please feel free to use it.

Voice Recorder  
8. PDF User Manual  
If scanning the QR code fails, please contact us to get it.



English



Deutsch



Italiano



Français



Español

Voice Recorder

recordings will be missed, and if set to 7, the sensitivity level is too high, resulting in capturing very fine sounds and thus noise.

Vor: Voice activated (Advice:0)

- If you need to turn on the voice activation, it is recommended to set the number to 1 or 2 . The smaller the number, the higher the decibel value required to activate the recording; conversely, a low decibel value will activate the recorder and may record noise.
  - When voice activation is turned on, slide the recorder's recording button to ON, which will record in voice activated mode.
  - Do not use voice activation on important occasions, as it will not record when the sound decibel is too low, so as not to possibly miss important recordings.
- ☑Check if [Vor] is set successfully
- ①Test 10 minutes of recording, the actual recording time may be about 5 minutes.
- ②If the recording file name starts with "V", the Vor setting has been successfully turned on. Example.

Voice Recorder

Cautions

- Children should not be allowed to play with the recorder alone. Do not drop or allow your device to collide with hard objects. Otherwise, it may cause data loss or other hardware damage of the recorder.
- Do not clean the recorder with chemical reagents or cleaning reagents, which will damage the shell of the recorder and corrode it.
- It is recommended not to use this recorder when driving a motor vehicle or riding a bicycle.
- Please back up the important files in the recorder in time.
- No one can guarantee the absolute security of the data. If data loss occurs, the files will be difficult to recover.
- Do not overload the charger. Do not allow the charging cable to be squeezed by heavy objects for a long time. Keep your device away from combustibles when charging, in order to avoid fire.
- In order to prevent electric shock, do not pull out the charger with wet hands.

Voice Recorder

V20220623-031949

Name	Date modified	Type
④ R2022023-230530	10/23/2022 11:05 PM	WAV File
④ R2022023-231003	10/23/2022 11:10 PM	WAV File
④ R20221025-110401	10/25/2022 11:04 AM	WAV File
④ R20221025-110432	10/25/2022 11:04 AM	WAV File
④ V20220623-031949	6/23/2022 3:19 AM	WAV File
④ V20220608-164047	6/8/2022 4:40 PM	WAV File

Bit: Bit rate (Advice:3)

- The higher the bit rate, the more memory and power it consumes.
- Select the bit rate and recording time that's right for you.

PART: Segment recording (Advice:0)

- This feature allows you to split large files or files with long recording times, making them easier to manage.
- Default 8 hours split once, change the number to change the split length (can be changed between 0-240). Example. 0 - 8 hours; 240 - 4 hours.
- After splitting, unnecessary files can be deleted to save memory.

Voice Recorder

4. Product Description

Dimensions	0.58*3.18*5.33 cm 0.23*1.25*2.10 inch
Weight	21g/0.74oz
Material	Zinc alloy
Battery specifications	200mAh
Built-in memory	32GB-64GB
Recording format	WAV
Music format	WAV/MP3/WMA
Support system	Windows/Mac/Android
USB interface	USB 2.0
Operating temperature	20 to 110°F
Recording sampling rate	48KHZ
Charging current/voltage	5V/1A
Charge time	2.5hours
Bit rate	32-384Kbps

\*To prevail in kind.

Voice Recorder

5. QA

Q1: Can't record/doesn't work?

- ①Check if the power and memory are sufficient.
- ②Recording is not possible when the recorder is connected to a computer, mobile phone or headphones.
- ③Is the recorder plugged into accessories such as data cable when recording, which will stop it from working. If you want to continue recording, please disconnect them from the recorder and turn it on again.
- ④Is the voice activation function turned on? If it is turned on, the recorder will stop working when the environment is quiet.
- ⑤If you still can't solve it, please contact us.

Q2: Can't listen after connecting earphones?

Headphones playback method: please refer to **Catalog 2.4**

①Make sure the earphones has been inserted, and the recorder is turned off before inserting the earphones.